



**VeGA T66R**  
r.v. 2024



MODEL	T66RS-D4 NO.23001013
-------	-------------------------

No.	ID zboží	Název
A	Part A	
A-01	T0660610000	Seat
A-02	B1044W08045	Bolt
A-03	B2028W00000	Nut
A-04	T0660620000	Seat fixing Plate
A-05	B5037W00000	Flat Washer
A-06	B1079W08020	Bolt
A-07	T06602W0000	Seat switch spring
A-08	T06602V0000	Seat vibration damping springs
A-09	B1010W08025	Bolt
A-10	B2008W00000	Nut
A-11	B1060W06016	Bolt
A-12	T06602U0000	Fix plate
A-13	T06602D0000	Seat vibration dampening spring retainer
A-14	T0660220057	Hegiht adjustment panel
A-15	B3022B00000	screws
A-16	T0660230057	Gear shift lever panel.
A-17	G53L1100013	Variable speed handle
A-18	T066042B000	speed governor
A-19	B1130W08025	screws
A-20	T06602T0000	Fixed plate
A-21	T0660290000	Throttle cable
A-22	T0660280000	Seat linkage rod
A-23	T06604K0000	Bolt
A-24	T0660240000	Support plate
A-25	B1010W08020	Bolt
A-26	T0660270000	Support Rods
A-27	T066025L000	left bracket for grass bag
A-28	T066026L000	left connecting plate for seat linkage rod
A-29	T06602C0000	seat frame support bracket
A-30	T06602B0000	Frame connection reinforcement plate
A-31	B1010W08045	Bolt
A-32	T066026R000	Right connecting plate for seat linkage rod
A-33	T066025R000	Right bracket for grass bag
A-34	S1050000000	Gear shift plate fixing bushing II
A-35	T06602H0057	Upper panel
A-36	B1058W06012	Bolt
A-37	T06603WA000	Wire clip
A-38	T06602K0000	Grass bag safty switch plate
A-39	T06602J0057	Lower panel
A-40	T06602S0000	Brake Spring

No.	ID zboží	Název
A	Part A	
A-41	T066021003A	Frame assembly
A-42	B1125W08016	Bolt
A-43	T06602L0000	Drive axle side fixing plate
A-44	T06602M0000	Tensioning spring
A-45	B1081W08060	Bolt
A-46	T06602F0000	Footrest support plate
A-47	T06602GR000	Footrest right fixing plate
A-48	T06603W1000	Blade clutch cable fixing plate
A-49	T06602GL000	Footrest left fixing plate
A-50	T06604M0000	brake pedal pad
A-51	T06604G0000	brake pedal retainer plate
A-52	T06604E0000	brake pedal Rods
A-53	T06604F0010	Brake pedal
A-54	T06604V0000	Pin
A-55	T06604W0000	Self-propelled clutch cable
A-56	T06604X0000	Brake Cable
A-57	B5019W00000	Flat Washer
A-58	BB011W00000	Pin
A-59	T06603WK000	reverse mowing switch fixing plate
A-60	T06603WL000	Reverse mowing pedal assembly
A-61	T06603WM000	Reverse gear cutting return spring
A-62	T06602P0000	Backward switch fixing plate
A-63	B2020W00000	Nut
A-64	T06602X0000	Bushing
A-65	B6006W00000	Spring washers
A-66	B9030B00000	Circlip
A-67	B30B1B18000	screws
A-68	B30B1B19X00	screws
A-69	B3006W00000	screws
A-70	B2007W00000	Nut
A-71	B3033B00000	screws
A-72	B3036B00000	screws
A-73	T06602A0000	Upper Cover fixing plate
A-74	T06607A0000	Fix plate
A-75	T0660790000	Grass Box Limit Hooks
A-76	T06607B0000	Bolt
A-77	T06607C0000	Spring

No.	ID zboží	Název
B	Part B	
B-01	T06605J0113	steering wheel cover
B-02	B1113W08160	Bolt
B-03	B6006W00000	Spring washers
B-04	B5037W00000	Flat Washer
B-05	T06605H0010	Steering Wheel
B-06	T06605G0010	steering connection sleeve
B-07	T06605K0010	steering wheel bottom cover
B-08	B5019W00000	Flat Washer
B-09	B800BB00000	Pin
B-10	B800CB00000	Pin
B-11	B5086B00000	Flat Washer
B-12	B1060W06016	Bolt
B-13	T06605E0000	Steering shaft plate
B-14	T06605D0000	Steering shaft bushings
B-15	T06605C0000	Steering shaft support seat
B-16	B2008W00000	Nut
B-17	B1076W08035	Bolt
B-18	B2028W00000	Nut
B-19	S1041200013	Handle Cover
B-20	B1067W06035	Bolt
B-21	S1041100000	handle
B-22	T06603W5000	Blade clutch operating lever
B-23	T06603W8000	Bushing 8×12×15.5
B-24	T06603W4000	Blade clutch operating lever spring
B-25	T06603W2000	Blade clutch puller assembly
B-26	T06603W7000	Bolt
B-27	B5028W00000	Flat Washer
B-28	BB010W00000	Pin
B-29	B1079W08020	Bolt
B-30	T06603WFX00	Cable
B-31	T06603W6000	Blade clutch gear plate
B-32	T06603WG000	Cutter belt brake tension spring
B-33	B9039B00000	Circlip
B-34	B5019W00000	Flat Washer
B-35	T06603W9000	Pin
B-36	T06604L0000	Brake cable fixing plate
B-37	T06603W3000	Blade clutch cable mounting plate assembly
B-38	T06603WB000	Blade clutch return tension spring
B-39	T06604S0000	Parking return tension spring
B-40	T06604K0000	Bolt

No.	ID zboží	Název
B	Part B	
B-41	T06604H0000	Parking plate assembly
B-42	T06604R0000	Parking spring
B-43	B3034B00000	screws
B-44	T06604N0000	Parking plate
B-45	T06604J0013	Parking handle
B-46	T066QHL0000	Front crossmember assembly
B-46-01	B1005W10075	Bolt
B-46-02	B5072W00000	Gasket
B-46-03	T0660520000	Front wheel suspension beam axle bushing
B-46-04	T0660510000	Front crossmember assembly
B-46-05	B6007W00000	Spring washers
B-46-06	B2024W00000	Nut
B-46-07	B9030B00000	Circlip
B-46-08	T0660540000	Front wheel axle bushing
B-46-09	T0660530000	Front wheel suspension beam
B-46-10	T0660570000	Steering linkage busing
B-46-11	T066053L000	Left front wheel axle assembly
B-46-12	T066053R000	Right front wheel axle assembly
B-47	T06605B0000	Steering shaft mounting plate
B-48	T06605A0000	Steering shaft fixed bushing
B-49	B9030B00000	Circlip
B-50	T0660590000	Steering shaft assembly
B-51	T066058X000	Steering linkage
B-52	T0660570000	Steering linkage busing
B-53	T0660540000	Front wheel axle bushing
B-54	T066056X000	13inch Wheel assembly
B-55	T0660165000	Gasket
B-56	T066056L013	Wheel cover
B-57	B5017W00000	Flat Washer
B-58	B1104W06015	Bolt
B-59	B2009W00000	Nut
B-60	BB011W00000	Pin

No.	ID zboží	Název
<b>C</b>	<b>Part C</b>	
C-01	B2029W00000	Nut
C-02	B1053W05014	Bolt
C-03	T0660A80000	Nylon Ties
C-04	T0660A9X000	ribbon
C-05	G53Y3000000	Charger
C-06	T066088Y000	Wire
C-07	T066088X000	Charger wire in battery
C-08	T0660830000	Acid-battery
C-09	T0660820000	Key assembly
C-10	T0660815000	Wire
C-11	T06608A0000	10A fuse
C-12	T0660816000	Motor Waire
C-13	T0660890000	Relays
C-14	T0660818X00	Battery Wire
C-15	T0660814000	Wire
C-16	T0660860000	Switch
C-17	T0660812000	Wire
C-18	B3033B00000	screws
C-19	T0660811000	PCB
C-20	T0660813000	Wire
C-21	T06608B0000	Protect cover

No.	ID zboží	Název
<b>D</b>	<b>Part D</b>	
D-01	T0660910113	Front part
D-02	B30B1B22000	screws
D-03	T066092L010	Left Cover
D-04	B3036B00000	screws
D-05	T066092R010	Right Cover
D-06	T0660930010	Lower Cover
D-07	T0660970010	seat base front cover
D-08	T0660940000	Front cover
D-09	T06609AL013	left side cover
D-10	T066096L010	seat base left cover
D-11	T06609BL000	Left connect plate
D-12	T066095L010	Left footrest plate
D-13	T06609AR013	left right cover
D-14	T066095R000	Right footrest plate
D-15	T06609BR000	Right connect plate
D-16	T066096R010	seat base right cover
D-17	T0660980010	Cover
D-18	T0660990010	Upper Cover
D-19	B3051B00000	screws

No.	ID zboží	Název
<b>E</b>	<b>Part E</b>	
E-01	T0660421000	Oil Tank
E-02	T0660422000	Tank Cup
E-03	Y78S0000000	Gasket
E-04	B1063W06022	Bolt
E-05	T0660424000	fuel pipe
E-06	T0660429000	coax
E-07	B1060W06016	Bolt
E-08	T0660427000	Oil tank lower brackets
E-09	B2008W00000	Nut
E-10	B30B1B18000	screws
E-11	T0660426000	Oil tank upper brackets

No.	ID zboží	Název
F	Part F	
F	T066DPCP057	Side discharge assy
F-01	BA021000000	#NENÍ_K_DISPOZICI
F-02	B1077W08025	Bolt
F-03	B6006W00000	Spring washers
F-04	B5006W00000	Flat Washer
F-05	T0660310000	Blade pulley assembly
F-06	BE00LW00000	Flat key
F-07	T066032X000	Blade pulley shaft
F-08	B0041W00000	Bearing
F-09	B2028W00000	Nut
F-10	T0660320000	Blade pulley hub
F-11	T066032Y000	Dust cover
F-12	B9020B00000	Shaft snap ring
F-13	BB010W00000	Pin
F-14	B5019W00000	Flat Washer
F-15	T0660570000	Steering linkage busing
F-16	T066037X000	Hex shaft directional joint
F-17	B2020W00000	Nut
F-18	B2009W00000	Nut
F-19	T06603A0000	Tensioning brake interlock rod
F-20	B2024W00000	Nut
F-21	B5085W00000	Flat Washer
F-22	T0660332000	Blade tensioning roller lever
F-23	B2005W00000	Nut
F-24	T0660340000	Blade tensioner fixing plate
F-25	B1098W08070	Bolt
F-26	B5005W00000	Flat Washer
F-27	T0660331X00	Blade tensioning roller
F-28	T066033X000	Bushing
F-29	T066035X000	Brake Plate
F-30	T0660360000	Support sleeve
F-31	B1004W10060	Bolt
F-32	T06603WDX00	Pulley limit holder
F-33	B6006W00000	Spring washers
F-34	B1010W08035	Bolt
F-35	T06603WG000	Cutter belt brake tension spring
F-36	T06603P0057	Blade
F-37	T06603EL000	Front - Deck Left fixing Plate
F-38	T06603ER000	Front - Deck Right fixing Plate
F-39	T06603WC000	Belt limiting screw
F-40	T06603FL000	Rear - Deck Left fixing Plate

No.	ID zboží	Název
F	Part F	
F-41	T06603FR000	Rear - Deck Left fixing Plate
F-42	B1010W08020	Bolt
F-43	B2012W00000	Nut
F-44	BE004W00000	Flat Key
F-45	T0660380000	Blade adoptor assembly
F-46	T0660390000	Blade
F-47	B600CB00000	Spring gasket
F-48	B1001B00032	Bolt
F-49	T066034X000	Fixed plate
F-50	B1064W06025	Bolt
F-51	T06603RS010	Side discharge grass cylinder base
F-52	B3044W00000	screws
F-53	T06603T7000	Safety plate shaft
F-54	T06603T6000	Safety plate spring
F-55	T06603T5013	Safety plate
F-56	T06603T4000	Side-discharge brackets
F-57	T06603T1010	Side-discharge Cover
F-58	T06603T2000	Spring
F-59	T06603U0010	Side-discharge guide plate
F-60	B1063W06022	Bolt
F-61	T06603Q0010	blade belt cover
F-62	G32X0000200	Quick coupling assembly for washing
F-63	B2025B00000	Nut
F-64	B2008W00000	Nut
F-65	B9038B00000	Shaft clamp
F-66	T06603T3000	Shaft
F-67	B3064B00000	screws

No.	ID zboží	Název
G	Part G	
G-01	S1041200013	Handle Cover
G-02	B1057W06010	Bolt
G-03	S1041100000	handle
G-04	T06603M0000	Blade height adjustment rod
G-05	T06603L0000	Blade height adjustment assembly
G-06	BB010W00000	Pin
G-07	B5005W00000	Flat Washer
G-08	B5028W00000	Flat Washer
G-09	B5081B00000	Flat Washer
G-10	B2009W00000	Nut
G-11	B2020W00000	Nut
G-12	T0660370000	Hex shaft directional joint
G-13	T06603K0000	Blade height adjustment rear rod
G-14	B5034W00000	Flat Washer
G-15	B1060W06016	Bolt
G-16	B2008W00000	Nut
G-17	G3ZT0000000	Front drive axle bushing
G-18	T06603C0000	Deck height adjust brackets assembly
G-19	T06603CX000	Bushing
G-20	B5082W00000	Flat Washer
G-21	T06603D0000	Blade height adjustment rod
G-22	T06603G0000	Blade height adjustment rear plate
G-23	T06603J0000	Pin
G-24	B1079W08020	Bolt
G-25	B6006W00000	Spring washers
G-26	B5083W00000	Flat Washer
G-27	T06603GY000	Nylon bushings
G-28	T06603GX000	Blade height control rotating axle
G-29	B9030B00000	Circlip
G-30	T06603H0000	blade height adjustment rear connecting plate
G-31	BB011W00000	Pin

No.	ID zboží	Název
H	Part H	
H-01	T06603S0010	Grass Discharge Cylinder
H-02	T066DCS0000	Mulching plug
H-02-01	T06603WH000	Lever
H-02-02	T06603WJ000	Cow Rope
H-02-03	G33J0000000	Plug
H-02-04	T06603V1001	Mulching plug handle bar
H-02-05	B2040W00000	Nut
H-02-06	B9041B00000	Circlip
H-02-07	T06603T3000	Shaft
H-02-08	T06603V0010	Mulching plug
H-02-09	T06603V2000	Mulching plug spring

No.	ID zboží	Název
I	Part I	
I-01	T0660720013	Grass bag front handle
I-02	T0660730013	Grass bag rear handle
I-03	T0660710010	Grass bag upper cover
I-04	B3044W00000	screws
I-05	T0660780001	Grass catcher handle strengthening rod
I-06	B3044W00000	screws
I-07	B1103W06030	Bolt
I-08	B1058W06012	Bolt
I-09	T0660750001	Upper support pipe assembly for grass bag
I-10	B30B1W19000	screws
I-11	T0660760001	Grass bag pipe connection plate
I-12	B2008W00000	Nut
I-13	T0660770001	Grass bag reinforced rod
I-14	T0660740001	Lower support pipe assembly for grass bag
I-15	T0660790010	Grass bag assembly
I-16	T06607D0000	Seals

No.	ID zboží	Název
J	Part J	
J-01	B30B1B17000	screws
J-02	T06604P0000	Exhaust outlet nozzle assembly
J-03	Y224VLC1000	Engine
J-04	T066041X000	Engine
J-05	T06603WEY00	Engine pulley bracket
J-06	B5004W00000	Flat Washer
J-07	B1004B00000	Bolt
J-08	B30B1B19X00	Screw
J-09	T06604T0000	Driveshaft pulley bracket
J-10	B2028W00000	Nut
J-11	B1043W08X40	Bolt
J-12	T066044X000	Drive tensioning roller lever
J-13	T0660443000	Tensioner studs
J-14	T0660451X00	Drive tensioning roller
J-15	B2008W00000	Nut
J-16	S1041200013	Handle Cover
J-17	B1057W06010	Bolt
J-18	S1041100000	handle
J-19	T0660490000	Gear lever
J-20	T06604U0000	Gear lever spring
J-21	T0660480000	Gear shift lever assembly
J-22	BB010W00000	Pin
J-23	B5005W00000	Flat Washer
J-24	B5088B00000	Flat Washer
J-25	T066037Y000	ball bearing
J-26	B2020W00000	Nut
J-27	T0660470000	Driveshaft rod
J-28	B1102W08075	Bolt
J-29	T06604C0000	Pin
J-30	T06604A0000	Side fixing plate for gear shift
J-31	T06604B0000	Gear lever rod
J-32	B1081W08060	Bolt
J-33	BA001400000	Belt
J-34	T0660100000	Drive axle assembly (four-speed)
J-34-1	B9032B00000	Shaft snap ring
J-34-2	T0660165000	Gasket
J-34-3	T0660101000	Gearbox pulley assembly
J-34-4	BE00KW00000	semi-circular button
J-34-5	T0660103000	oil seal retainer
J-34-6	BC020B00000	oil seal
J-34-7	B0040W00000	bearing
J-34-8	T0660102000	Shaft
J-34-9	BD011B00000	O ring
J-34-10	T0660104000	Bevel

No.	ID zboží	Název
J	Part J	
J-34-11	B9037B00000	Shaft snap ring
J-34-12	B2031W00000	Nut
J-34-13	B2029W00000	Nut
J-34-14	T06602N0000	Fixed plate
J-34-15	T06602Q0000	Switch
J-34-16	B3072W00000	Screw
J-34-17	BH002W00000	Bearing steel balls
J-34-18	B2009W00000	Nut
J-34-19	B1079W08020	Bolt
J-34-20	T06602R0000	Fixed plate
J-34-21	B1053W05014	Bolt
J-34-22	T0660166000	Bolt
J-34-23	T0660150000	Spring
J-34-24	BH001W00000	Bearing steel balls
J-34-25	B1060W06016	Bolt
J-34-26	B6005W00000	Ring
J-34-27	B5027B00000	Gasket
J-34-28	T0660152X00	Pin
J-34-29	T0660152000	Gear lever
J-34-30	BD012B00000	O ring
J-34-31	T0660134000	Fork Assembly
J-34-32	T0660151000	Plug
J-34-33	B30B1W15000	Screw
J-34-34	T0660153000	Upper cover
J-34-35	T0660114000	Shaft
J-34-36	T0660160000	Washer
J-34-37	T0660135000	Gear
J-34-38	T0660123000	bushings
J-34-39	T0660146000	gear shift paddles
J-34-40	T0660133000	Shaft
J-34-41	B9036B00000	Shaft snap ring
J-34-42	T0660161000	Washer
J-34-43	T0660122000	Reverse driven gear
J-34-44	T0660121000	Neutral Gear Sleeve
J-34-45	T0660116000	Driven gear for speed1
J-34-46	T0660124000	Washer
J-34-47	T0660117000	Driven gear for speed2
J-34-48	T0660118000	Driven gear for speed3
J-34-49	T0660119000	Driven gear for speed4
J-34-50	T0660168000	Bushing
J-34-51	T0660145000	Sleeve
J-34-52	BC021B00000	oil seal
J-34-53	T0660144000	Bushing
J-34-54	T0660158000	Washer

No.	ID zboží	Název
J	Part J	
J-34-55	T0660137000	Shaft
J-34-56	T0660136000	Gear
J-34-57	T0660138000	Sleeve
J-34-58	T0660139000	Gear
J-34-59	T0660108000	Bushing
J-34-60	T0660159000	Washer
J-34-61	T0660115000	Shaft
J-34-62	T0660107000	Reverse Gear Bevel
J-34-63	T0660105000	Bevel
J-34-64	T0660109000	Bevel for speed1
J-34-65	T0660110000	Bevel for speed2
J-34-66	T0660111000	Bevel for speed3
J-34-67	T0660112000	Bevel for speed4
J-34-68	T0660167000	Bushing
J-34-69	BC022B00000	oil seal
J-34-70	T0660147000	Shaft
J-34-71	T0660157000	Gasket
J-34-72	T0660143000	Bevel
J-34-73	B9033B00000	Shaft snap ring
J-34-74	T0660142000	Pin
J-34-75	T0660140000	Bevel disk
J-34-76	T0660141000	Bevel
J-34-77	T0660148000	Shaft
J-34-78	T0660154000	Lower cover
J-34-79	T0660126000	Brake plate
J-34-80	T0660125000	Breke disk
J-34-81	T0660128000	Pin
J-34-82	T0660127000	Fixed plate
J-34-83	T0660156000	Pin
J-34-84	T0660130000	Brake rocker arm
J-34-85	T0660155000	Spring
J-34-86	T0660131000	Plate
J-34-87	B1135W06055	Bolt
J-34-88	B1067W06035	Bolt
J-34-89	T0660162000	Washer
J-35	BE001W00000	Flat Key
J-36	B5041B00000	Flat Washer
J-37	T06604Q0000	Bushing
J-38	T066046X000	Wheel
J-39	B9034B00000	Circlip
J-40	B5084W00000	Flat Washer
J-41	T066056H013	Wheel cover
J-42	B0042W00000	Bearing
J-43	B9040B00000	Hole snap ring

No.	ID zboží	Název
J	Part J	
J-44	B5082W00000	Flat Washer
J-45	B5048W00000	Flat Washer
J-46	T06603WEX00	Engine pulley right bracket
J-47	T06603WEW00	Engine pulley left bracket
J-48	B2009W00000	Nut
J-49	B6006W00000	Spring washers
J-50	B2017W00000	Nut
J-51	T0660451Y00	Drive tensioning roller